


How to install older unsigned Drivers (Digicam, player, twixclip etc.) on Windows 8

Important! Device must be connected to USB-Port!

- Press keys "**Win + I**" , then "**ON/OFF**" Button

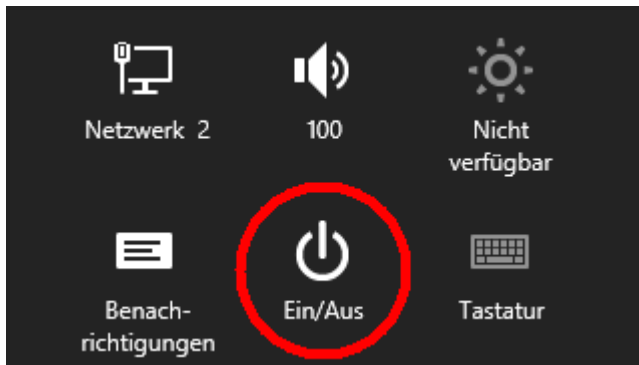

- Press and hold a shift key then click (left mouse button) Popup-Menu „**Restart**“



- Select **Troubleshooting**



- Select „**Advanced Options**“




- Select „**Start options**“



- Select „**Restart**“



- Select Option 7 (F7)

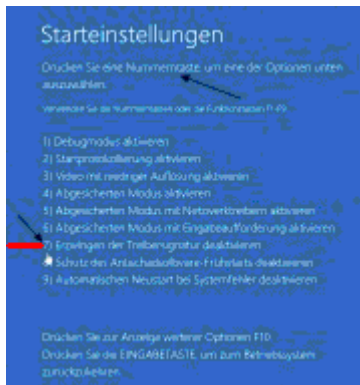

After Windows restart install your driver again (Control Panel > System > Device manager).

Reboot Windows after installation.